



Nerf Bars for E-Z-Go

-Installation Instructions-

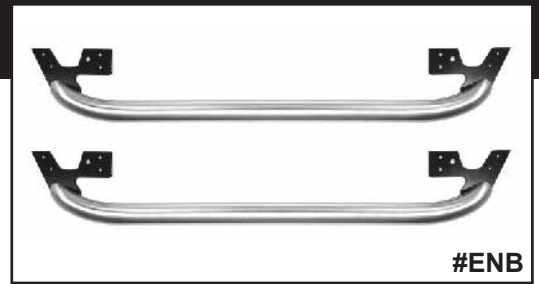

Drill rivets and plastic side step panels and remove. When drilling be careful of batteries/gas tank. You may want to put something in between the frame to protect this from happening. Pre-drill 1/8" holes for self tapping screws. Mount nerf bar to brackets before installing on cart. Mount brackets with bolts (see diagram). Use self tapping screws in misc. small holes for added support.

Notes: If reinstalling plastic side covers, you will need to notch area around brackets. If you are installing our diamond plate side covers, install them last (pre-notched).

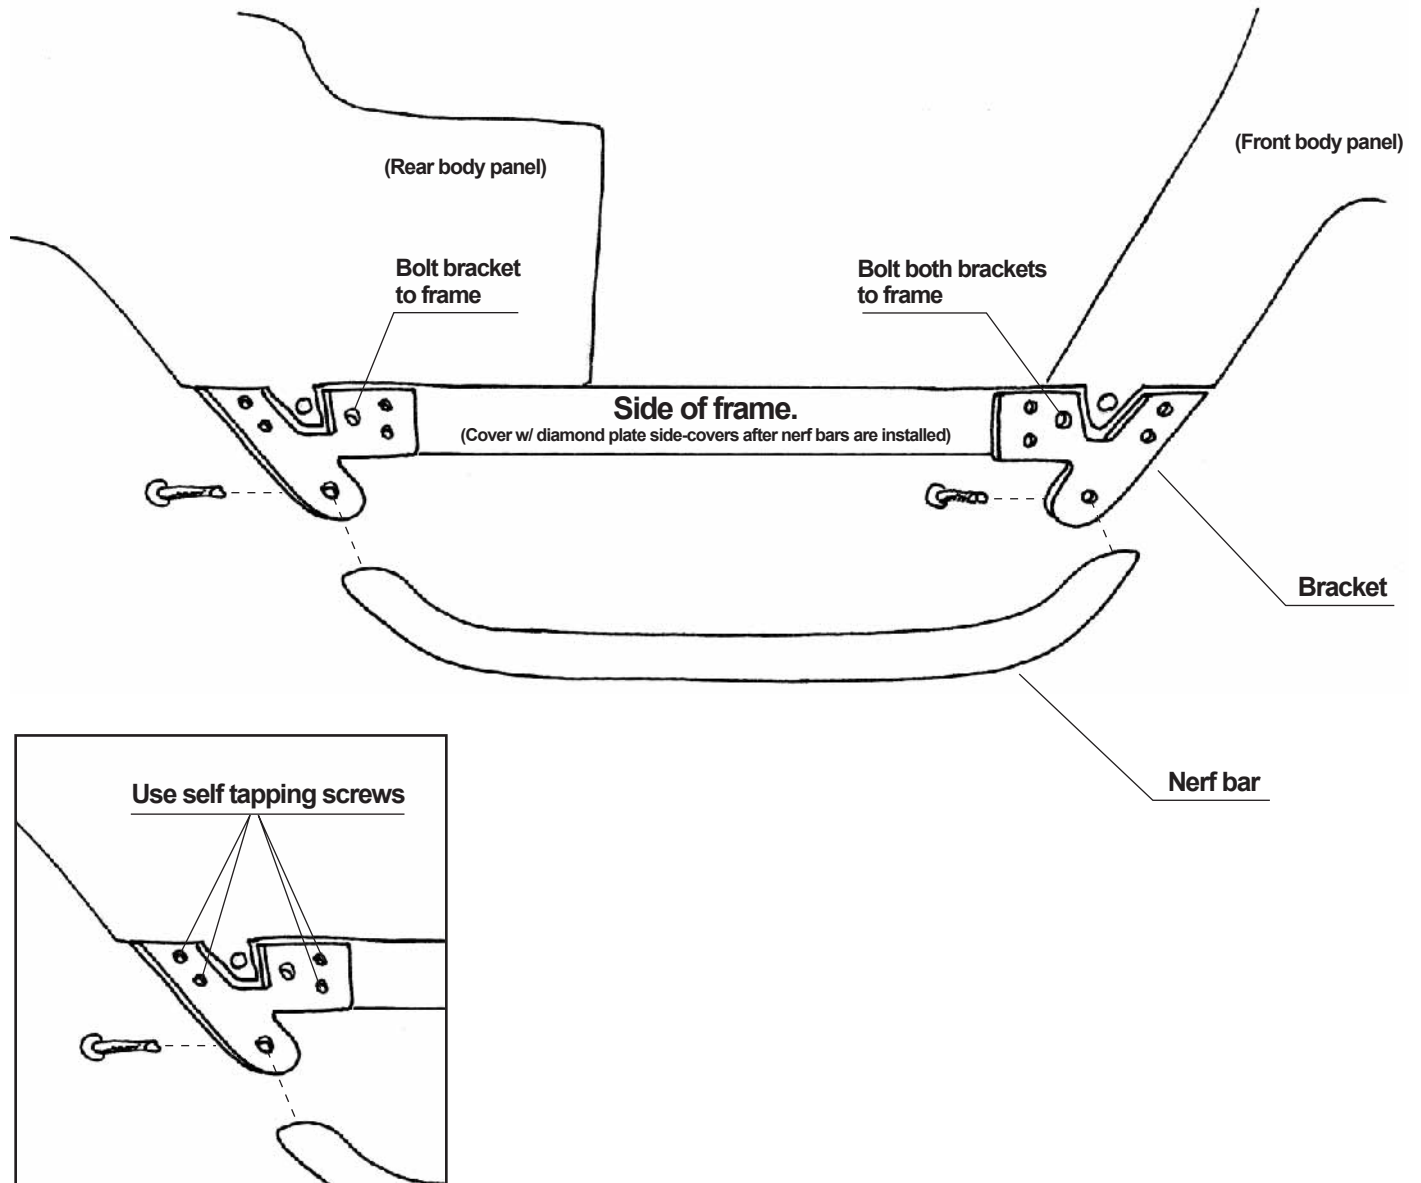

DISCLAIMER: All lift kit or accessory installations should only be performed by professional mechanics. The buyer assumes sole responsibility for, and shall indemnify the dealer/retailer, from any and all liability, claim, responsibility, and damage, or any costs or expenses resulting from any loss of life or injuries or claimed injuries to persons or property that may be sustained in connection with the use of any product before or after purchase, including but not limited to lift kits. Dealer/retailer reserves the right, at any time, to discontinue or change prices, specifications, features, designs, models or equipment without further notice and without incurring any further obligations.